

AltRider Rear Luggage Rack for KTM 1190 Adventure & R INSTALLATION INSTRUCTIONS

The most up to date instructions can be downloaded from the product page at altrider.com, under the instructions tab.

Dear Rider,
Thank you for choosing Altrider! Whether a seasoned world adventurer or a first time ADV-Newbie, we welcome you to the Altrider experience. You can install your new product with the utmost confidence. Altrider designs, tests, and manufactures all of its products here in the United States. We are proud to do what we do, and honored to present to you the product of our labors.

=njoy it, show it off, and most of all, RID= IT!

venture on, Jeremy Lebreton





AltRider Rear Luggage Rack for KTM 1190 Adventure & R

Package Contents:

- luggage rack
- Hardware kit

AltRider LLC

Global

mailing:

4000 Aurora Ave N Ste 100 Seattle, WA 98103 USA 206-922-3618

phone: 206-922-3618 email: info@altrider.com web: www.altrider.com

Europe


: Oude Middenweg 231-M 2491 AG DEN HAAG

Netherlands
il: info@altrider.eu
www.altrider.eu

Rev 4
MADE IN THE USA





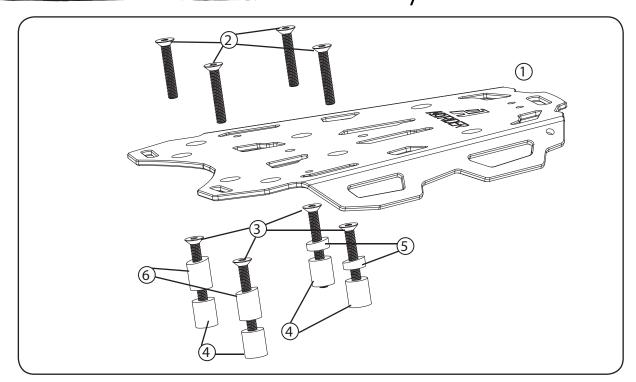

Kit:

- (1) Rear rack
- (2) (2) M8 x 50 screws, (2) M8 x 45 screws
- (3) (4) M8 x 70 mm flat head screws
- (4) (4) 22.2mm x 19.05 OD spacers
- (5) (2) 8mm custom angled spacers
- (6) (2)25mm custom angledspacers



Recommended tools:

- 1) hardware tray
- 2) 1/4" ratchet
- (3) 1/4" driver
- 4 T40 Torx driver / or L handle
- (5) M5 allen driver
- (6) Thread locker







Option #1, install AltRider rack directly on top of OEM rack. First place the (4) 22.2mm spacers in the (4) small indentations on the OEM rack.




① Option #2, install rack with no OEM rack or grab handles. Remove the OEM rack and grab handles by using a T40 driver to remove the (4) OEM bolts.



Place the AltRider rear rack on top of the spacers and insert the Two(2) M8 x 45mm bolts and two(2) M8 x 50mm bolts. Use thread locker, and tighten in alternating pattern to 15nM.



Place the AltRider provided space combo as shown with 8mm angled spacers stacked on top of 22.2 mm spacers closest to the seat, and 25mm sloped spacers nearest the back of the tail. Low point of the spacer should face forward (towards the seat).

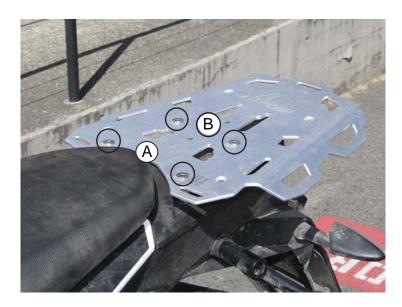

Place the AltRider rack over the spacers. Use thread locker. Insert the two(2) M8 x 50mm bolts in the front holes (A). Insert the two(2) M8 x 45mm bolts in the rear two holes(B). Torque to 15 Nm.



2 TIP: Use a dab of thick grease to help hold the spacers in place. Start one M8x70mm bolt until it is inserted a few threads, but still loose. Then start the second M8x70mm bolt, keeping it loose too.



① DSUJ i [fZ YcST ZS` V ₩ Front is a stack of 22mm straight spacer (A) plus 8mm angled spacer.(B)

Rear is 25mm angled spacer.(C)



Repeat steps 2 and 3 with the next grab handle. Once all (4) bolts are in place loosely, check the angled spacer alignment and turn by hand to the correct position if needed. Torque the bolts to 15 nm.

CONGRATULATIONS!

You've completed your installation. If at any point you have questions about your installation or have any feed back for us, we'd love to hear it. A downloadable version of these instructions can be found at our web site. www.AltRider.com

After 5 hours of riding, or 100 miles, check all the fasteners on the assembly to ensure they are tightened to spec.

Global Office:

email: info@AltRider.com

phone: +1 206-922-3618

address: 4000 Aurora Ave N

Ste 100

Seattle, WA 98103

TERMS OF USE, WARRANTY AND LIABILITY WAIVER

AltRider LLC, a Washington company, having its principal place of business in Seattle, WA ("AltRider") offers its motorcycle accessories (the "Product") with the terms, conditions and notices as follows:

Terms of Use

This Product is offered to you conditioned upon your acceptance without modification of the terms, conditions, and notices contained herein. Installation and/or use of this product implies acceptance of all such terms, conditions, and notices. If you do not agree to these terms, do not buy the Product. If you have already bought the Product and do not agree to these terms, return this Product promptly including the packaging and all written materials, to AltRider.

Limitation of Liability and Warranty Disclaimer

You may return your merchandise for a full refund or exchange, less any original or return shipping fees under these conditions:

- 1. Only if the merchandise is in 100% factory condition. Original manufacturer's packaging and same condition as sold original boxes, packaging material, instructions, documentation, parts, and attached tags.
- 2. Only unused, unscratched, uninstalled, undamaged merchandise will be accepted. Do not install equipment until you are sure you want to keep it. Package items carefully in protective materials before returning them. Never ship an item in its original manufacturers packaging it will arrive damaged. Please use a postal box or other adequate packaging to ensure your return or exchange is not damaged on the way back to AltRider.com.

To read more about our exchanges and returns policy, on the web, navigate to http://www.altrider.com/info/exchangesAndReturns

Excepting the warranties stated in the preceding paragraph, AltRider hereby disclaims all other warranties and conditions with regard to the Product including all implied warranties and conditions of merchantability and fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof. AltRider does not warrant against damages or defects arising out of use or installation of the Product. Installation instructions are provided for your convenience. AltRider is not responsible for any damages arising out of the installation, improper or otherwise, of the Product. No warranty of any kind, expressed or implied, is made regarding the safety of this Product.

To the extent allowed by law, AltRider shall not be held liable for any direct, indirect, punitive, incidental, special or consequential damages arising out of, or connected with, the use or misuse of this Product. Buyer assumes all risks and liability arising from use of this Product.

Entire Agreemen

This document states the entire obligation of AltRider with respect to the Product. If any part of this agreement is determined to be void, invalid, unenforceable or illegal, including, but not limited to the warranty disclaimers and liability limitations set forth above, then the remainder of the agreement shall remain in full force and effect.

Applicable Law

This agreement is governed by the laws of Washington, USA. You hereby consent to the exclusive jurisdiction and venue of the courts of Washington, USA, in all disputes arising out of or relating to the use of this product.

Europe Office:

email: info@AltRider.eu

address: Oude Middenweg 231-M

2491 AG DEN HAAG

Netherlands



